


Plug-in relay couplers

More information

Notes on configuration

PT series


Mounting the LZS:PT17024 fixing/ejection bracket on the LZS:PT787.0 standard plug-in base with screw terminals

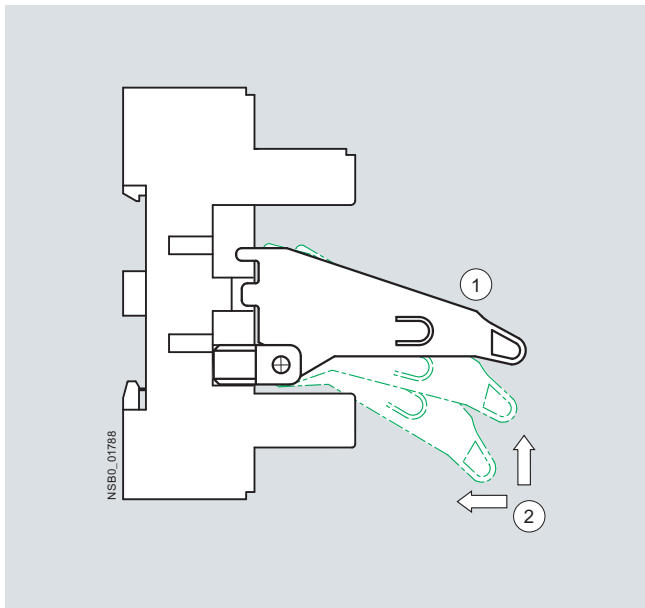

Legend:

- ① Locking position
- ② Mounting direction


Mounting the coupling relay with plug-in relay

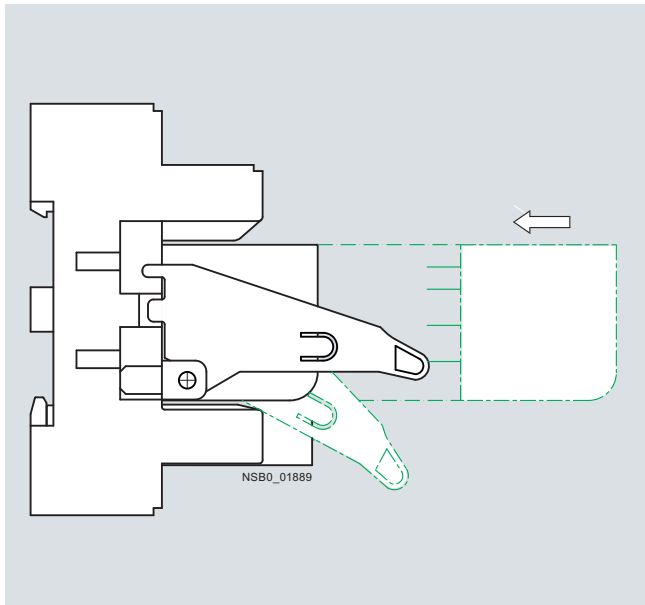

Important:
The LZS:PT17021 and LZS:PT17024 ejection brackets of the coupling relays with plug-in relay are not status displays!

RT series


Mounting the LZS:RT17016 fixing/ejection bracket on the LZS:RT7872. plug-in base

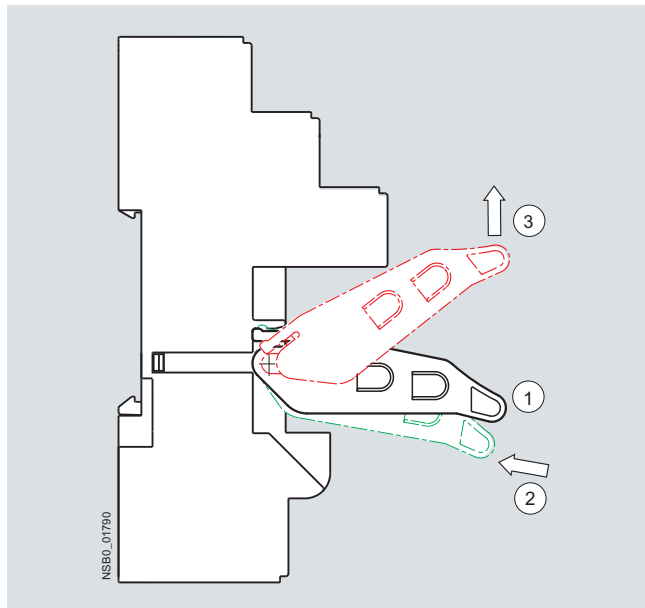

Legend:

- ① Locking position
- ② Mounting direction
- ③ Demounting direction

Mounting the coupling relay with plug-in relay

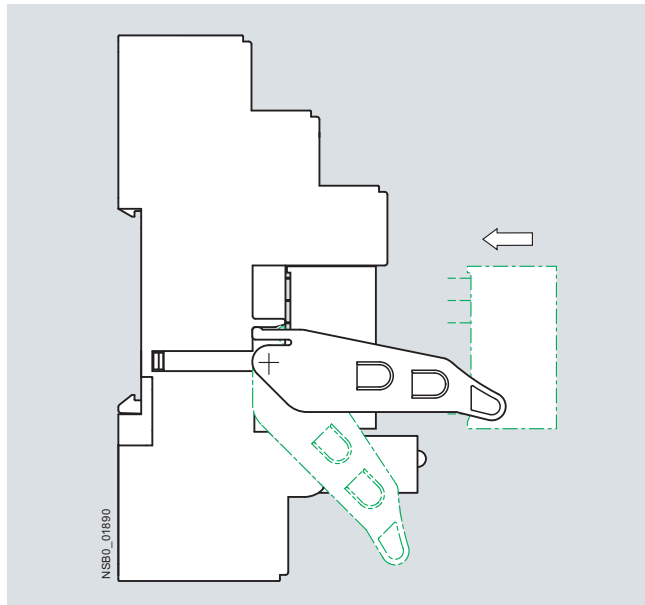

Important:
The LZS:RT17016 ejection brackets of the coupling relays with plug-in relay are not status displays!