

Transmitter to be fitted

Order code

To order the sensor with a built-in temperature transmitter, add "**-Z**" to the Order No. of the sensor, and supplement by the following Order code:

SITRANS TH100, only for Pt100

- Without Ex
- EEx ia IIC and EEx n for zone 2
- FM

T10**T11****T13**

SITRANS TH200

- Without Ex
- EEx ia IIC and EEx n for zone 2
- FM (IS, I, NI)

T20**T21****T23**

SITRANS TH300

- Without Ex
- EEx ia IIC und EEx n for zone 2
- FM (IS, I, NI)

T30**T31****T33**

SITRANS TH400 PA

- Without Ex
- EEx ia

T40**T41**

SITRANS TH400 FF

- Without Ex
- EEx ia

T45**T46**

Customer-specific setting of the built-in transmitter (specify settings in plain text)

Y11¹⁾

SIL2 application
(only in combination with TH200 and TH300)

Y01: SIL2, C20 + Txx

1) For TH400 FF available soon