Transmitter to be fitted	Order code
Transmitter to be fitted	Order code
To order the sensor with a built-in temperature transmitter, add "-Z" to the Order No. of the sensor, and supplement by the following Order code:	
SITRANS TH200	
• without Ex	T20
• EEx ia IIC and EEx n for zone 2	T21
• FM (IS, I, NI)	T23
SITRANS TH300	
• without Ex	T30
• EEx ia IIC und EEx n for zone 2	T31
• FM (IS, I, NI)	Т33
SITRANS TH400 PA	
• without Ex	T40
• EEx ia	T41
SITRANS TH400 FF	
• without Ex	T45
• EEx ia	T46
Customer-specific setting of the built-in transmitter (specify settings in plain text)	Y11 <sup>1)</sup>
SIL2 application (only in combination with TH200 and TH300)	Y01: SIL2, C20 + Txx
1) For TUACO FF quallable seen	

<sup>1)</sup> For TH400 FF available soon.