


Coupling Relays and Converters

Converters/Isolation Amplifiers


Interface converters/isolation amplifiers

Circuit diagrams


3RS17 00-..D..
 3RS17 02-..D..
 3RS17 03-..D..
 3RS17 05-..D..

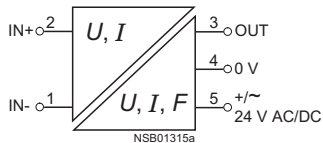


3RS17 06-..FD00

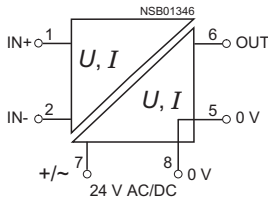


3RS17 06-..FE00

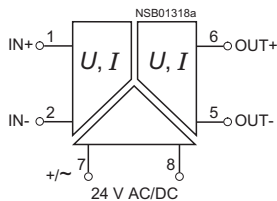


3RS17 0-..W00

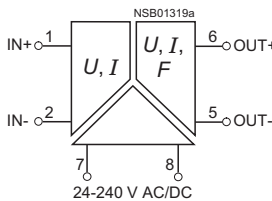


3RS17 25-..FD00

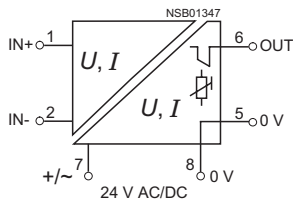


3RS17 25-..FW00

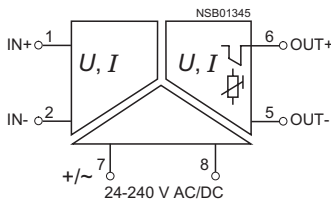

3RS17 20-..ET00

 

3RS17 21-..ET00

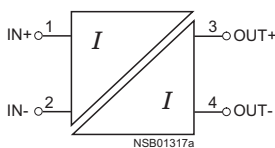

3RS17 22-..ET00

