




Схемы подключения внешних цепей

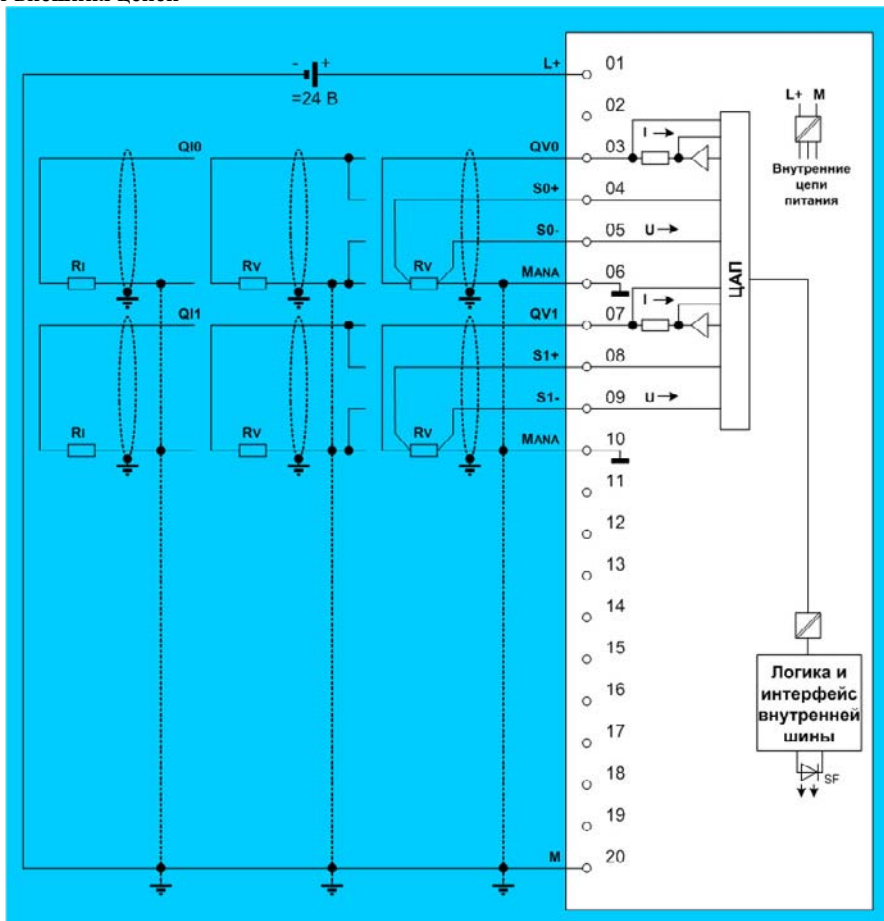


6ES7 332-5HB01-0AB0, 6AG1 332-5HB01-2AB0

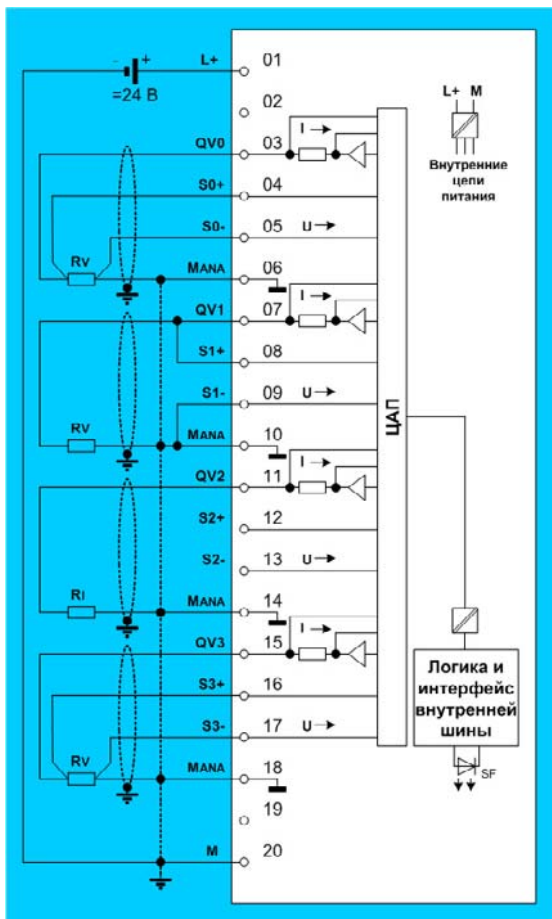

6ES7 332-5HD01-0AB0

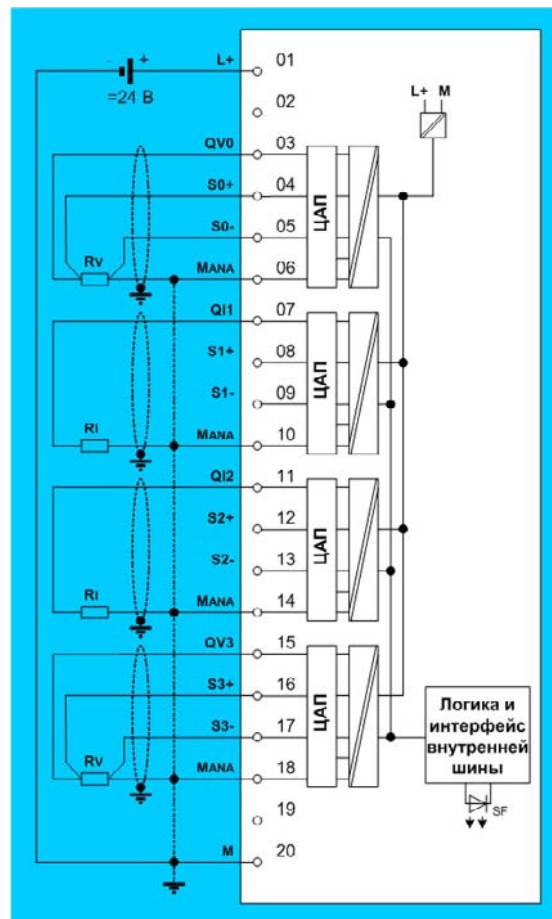

6ES7 332-7ND02-0AB0

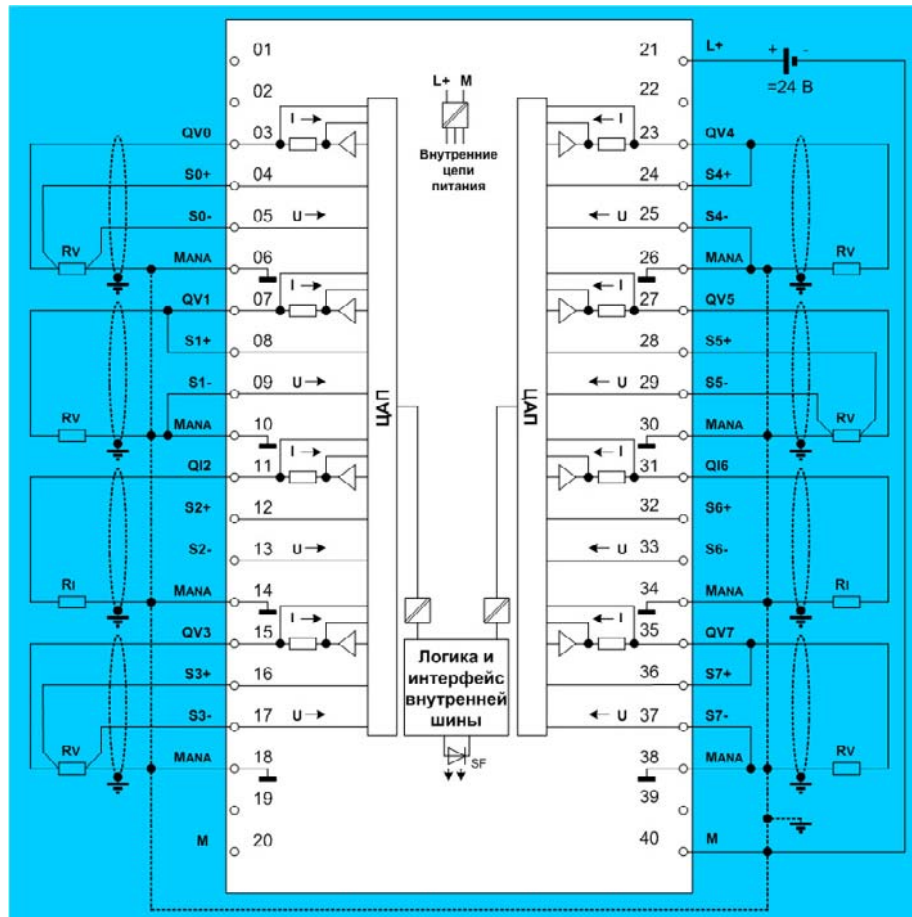

EM 231 6ES7 332-5HF00-0AB0